

# Tuning Instructions for ARION/VISIONASIA

1. Press Menu on your remote control
2. In the "search channel" menu screen, press down "▼" to highlight to "Manual Search" and press "OK"
3. Press down "▼" to highlight "Frequency"
4. Press "OK" on the frequency and from the list in "select transponder" menu screen Select 12706  
\*\*If the frequency 12706 is not in the list, press in the numbers 12706 in "Frequency"
5. Press down "▼" to highlight to "Symbol rate" It should be 22500. If not, then type in 22500
6. Press down "▼" to highlight to "Polarisation" It should be Vertical
7. FEC should be 3/4 (If it is 2/3, press "▶" to change to 3/4)
8. Network Search should be YES
9. FTA Only should be NO
10. Press Red button on remote control to SEARCH
11. Press "OK" when the message "DO you want to save?" appears
12. The receiver will scan for channels.
13. It will list the new channels scanned
14. Press "OK" to save this search
15. Exit out of all MENUS.
16. Change channels till you come to the Vision Asia channels