

# Tuning Instructions for SONIC

1. Press Menu on your remote control
2. Press down "▼" to highlight "Installation" and press "OK"
3. Enter password "9949" from the remote
4. Press down "▼" to highlight "Manual TP Search" and press "OK"  
"Manual TP Search" menu will come up on the screen
5. Press down "▼" to highlight "Frequency."
6. Press left "◀" to delete all digits
7. Enter "12706" in frequency from the remote
8. Press down "▼" to highlight "Polarity" It should be-Vertical. If it is  
"Horizontal"press "◀" to change it to "Vertical"
9. Press down "▼" to highlight "Symbol rate"-22500(if it is some other number, press the  
left "◀" and delete the digits, then type in 22500)
10. Press down "▼" to highlight "Code Rate"- 3/4 .If it is 2/3 press "◀" to change it to 3/4
11. Press down "▼" to highlight "Network Search" and change to "Enable" pressing "◀". The  
screen will show "Scanning Menu" and channel names appear
12. Press "ok" to save this new list on getting the message" Do you want to save channels"
13. Exit thrice and go VA channel (scroll up the channels using remote control)
14. It will scan all channels.
15. Press exit thrice and go to the Colors channel.