



Tuning Instructions for UEC

1. Press "Menu" on your remote control
2. Press down "▼" to highlight "Advanced Options" and press "OK"
3. Press "OK" for "Change Dish Installation"
4. Press 9949 (PIN code for installation)
5. Press down "▼" to "Signal Setup" and press "OK"
6. Press "OK" on "Signal Setup 1 home" and
7. Change the Signal source to "Enabled" by pressing the "◀" arrow key
8. Press down "▼" to highlight "Frequency"
9. Press left "◀" to delete all digits
10. Press 12706
11. Press down "▼" to highlight "Symbol Rate" It should be 22500. If not, press "◀", to delete all numbers and type in 22500
12. Polarisation –Vertical, FEC-3/4
13. Press "OK"
14. Press "EXIT" once to come to "Change Dish Installation" menu
15. Press down "▼" to "Tune & Rescan" and press "OK"
16. Wait while service scan takes place (approx 1 minute)
17. Change channels till you come to the Vision Asia channels