

Decoder Tuning instructions

1. Press Menu button from the remote
2. Go to Installations and go to LNB settings and press OK
3. Enter pin no.. 0000
4. LNB setting menu will open up
5. Highlight LNB type and over right from remote 11300 / 10700
6. Then press down arrow key
7. Highlight OK and press OK cursor will go back to satellite name Optus B3 or Optus D2
8. Then press Exit button
9. Press Menu on your remote control
10. Press right arrow "→" to move cursor to Installation
11. Press down "↓" to move and highlight to Manual Search and press OK
12. Press 0000 in response to "Please input password to enter this menu"
13. Check the satellite name should be Optus B3 or Optus D2 if not then press right or left arrow key and select the same.
14. Press down "↓" to go to TP
15. Change the TP by pressing the right arrow to TP 5 or any other TP where the Trans freq. is 12706 if not then type it from remote 12706
16. Trans freq. should be 12706
17. Symbol Rate should be 22500 if not then press the numbers with remote
18. Polarization should be Vertical if not then press right arrow key and change to Vertical
19. Skew should be Off
20. Network search should be ON if not then press right arrow key and change to ON
21. Press down "↓" till the end and then right arrow "→" to move cursor to "Save" and press "OK"
22. Curser will go back to Satellite name Optus B3
23. Check the signal strength it should be more than 50% if not then signals are not there channels will not get scanned.
24. Press down "↓" to highlight "Search TP" at bottom of page and press "OK"
25. Press OK (for "ALL") in information box
26. Wait till the channels are tuned.
27. Press "EXIT" button to get out of the main menu
28. Scroll the channles and look for ZOOM